


Signalling / protecting modules

For sockets type:

GZT80, GZM80, GZS80, GZP80, GZT92, GZM92, GZS92,
ES 32, GZT2, GZM2, GZT3, GZM3, GZT4, GZM4, GZP4

Modules type M... are parallelly connected with relay coil.
Polarization P: -A1/+A2. Polarization N: +A1/-A2.

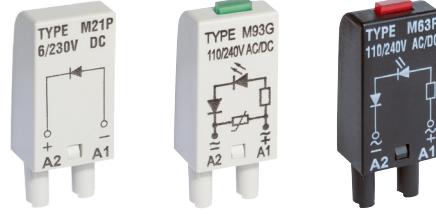


Modules type M...	Layout	Voltage	Type of module ① ②
Module D (polarization P) It limits overvoltage on DC coils.	+A2 o — A1 o	6/230 V DC	M21P
Module D (polarization N) It limits overvoltage on DC coils.	-A2 o — +A1 o	6/230 V DC	M21N
Module LD (polarization P) It limits overvoltage on DC coils. Coil energizing indication.	+A2 o — A1 o	6/24 V DC 24/60 V DC 110/230 V DC	M31R, M31G M32R, M32G M33R, M33G
Module LD (polarization N) It limits overvoltage on DC coils. Coil energizing indication.	-A2 o — +A1 o	6/24 V DC 24/60 V DC 110/230 V DC	M41R, M41G M42R, M42G M43R, M43G
Module RC It protects against EMC disturbance. It limits overvoltage.	A2 o — II A1 o — O	6/24 V AC/DC 24/60 V AC/DC 110/240 V AC/DC	M51 M52 M53
Module L Coil energizing indication.	= A2 o — A1 o	6/24 V AC/DC 24/60 V AC/DC 110/240 V AC/DC	M61R, M61G M62R, M62G M63R, M63G
Module LV It limits overvoltage on AC and DC coils. Coil energizing indication.	= A2 o — A1 o	6/24 V AC/DC 24/60 V AC/DC 110/240 V AC/DC	M91R, M91G M92R, M92G M93R, M93G
Module V It limits overvoltage on AC coils. No indication.	A2 o — O A1 o — II	6/24 V AC 110/130 V AC 220/240 V AC	M71 M72 M73
Module R It limits harmful voltage on AC coils induced in long lines which causes unwanted making of the relay.	A1 o — O A2 o — II	110/240 V AC	M103

① M...R - LED red, M...G - LED green ② When ordering modules indicate their color: gray or black.

For sockets type: GZT2-V0, GZT3-V0, GZT4-V0

Modules type M...-V0 are parallelly connected with relay coil. Polarization N: +A1/-A2.

Modules type M...	Layout	Voltage	Type of module
Module LD (polarization N) It limits overvoltage on DC coils. Coil energizing indication.	-A2 o — +A1 o	6/24 V DC 110/230 V DC	M41G-V0 M43G-V0

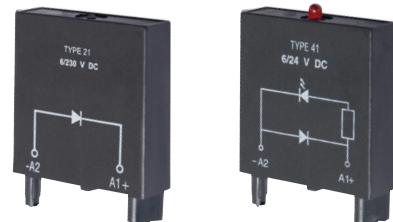

For sockets type: GZP8, GZP11

Modules type 21, 41 are parallelly connected with relay coil.
Polarization N: +A1/-A2.

Modules	Layout	Voltage	Type of module
Module D (polarization N) It limits overvoltage on DC coils.	-A2 o — +A1 o	6/230 V DC	Module 21
Module LD (polarization N) It limits overvoltage on DC coils. Coil energizing indication (LED red).	-A2 o — +A1 o	6/24 V DC	Module 41